




Need Help? Contact@BuyMattressRenew or 469-209-9744

DO NOT OVER INFLATE!

MINIMAL AIR is required to make a BIG difference in the feel and support of your mattress. It is easier to add air than to remove it. Count your pumps while inflating to ensure you have equal air pressure on opposite sides. For every 4 pumps, Mattress ReNew will lift your mattress approximately 1-1 ½ inches. No two mattresses sags are alike. A little trial and error is to be expected during setup. Keep in mind that when uninflated, Mattress ReNew is as thin as a pamphlet. If your bed feels too firm after setup, the cells were overinflated.

IMPORTANT: If you over-inflate a cell, you will need to squeeze the corresponding air valve with your thumb & forefinger while pushing or rolling out the air from the over-inflated cell.

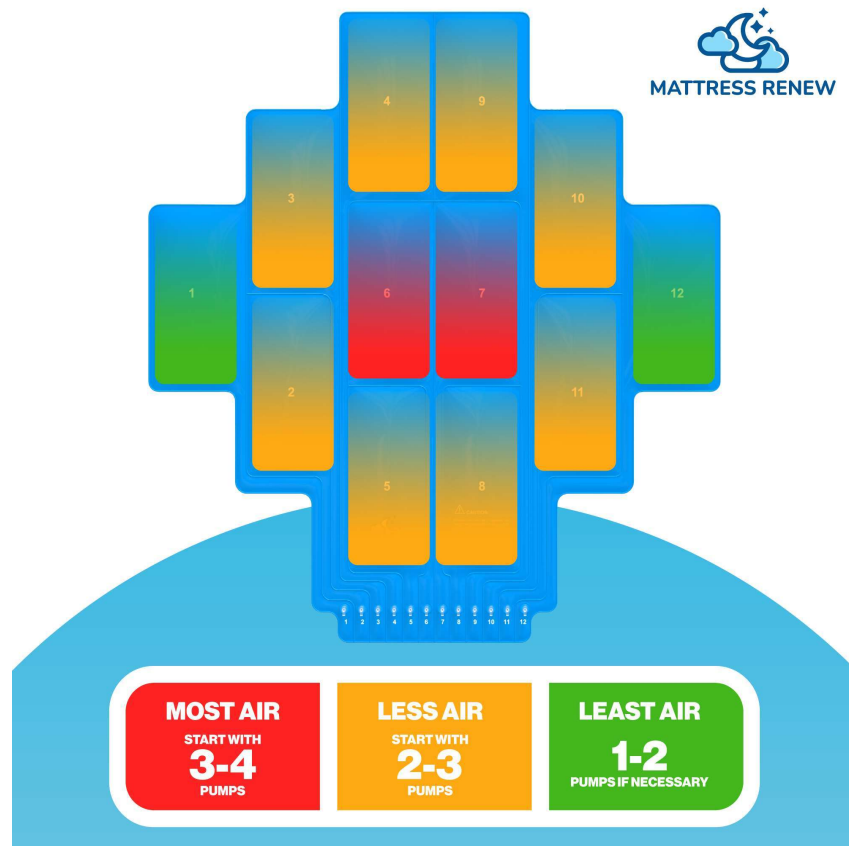

CONTINUED ON NEXT PAGE



#1 *SCAN QR CODE ABOVE FOR YOUTUBE TUTORIAL VIDEO*****

Open Mattress ReNew completely so that air valves and passage chambers are exposed. "Creases" that may have occurred inside the carton will become flattened out by opening and gently stretching out the product at this time.

#2 Lie down on your mattress as you normally do to identify the areas that are sagging.

#3 Use the included air pump to fill any of the 12 chambers based on the identified mattress sag in step #2. Firmly seal each air valve after pumping with the fitted valve cover. A good seal is required to ensure your mattress remains "sag-free".

TWIN mattress = air in chambers 4,5,6,7,8,9 **(A)** Slightly more air in #6 & #7, and less air in the surrounding chambers.

FULL mattress = air in chambers 4,5,6,7,8,9, and possibly in 2,3,10,11 **(A or B)** Slightly more air in #6 & #7, and less air in the surrounding chambers.

QUEEN mattress = air in chambers 2,3,4,5,6,7,8,9,10,11 and possibly 1 &12 **(B or C)** Slightly more air in #6 & #7, and less air in the surrounding chambers.

KING mattress sagging in the **CENTER ONLY** = air in all chambers **(C)**. Slightly more air in #6 & #7, and less air in the surrounding chambers.

KING mattress sagging in **TWO SEPARATE AREAS** will require 2 Mattress ReNew units **(D)** Slightly more air in #6 & #7, and less air in the surrounding chambers.

#4 Carefully move the mattress from its underlying foundation. **Exercise caution when lifting your mattress; it is recommended that you have the assistance of another person when lifting heavy objects.** Position Mattress ReNew so that the inflated chambers will match the corresponding mattress sag. Lay the mattress on top.

#5 Lie down on your mattress. **You will immediately feel the difference!** If you still feel the sag, add a little more air. If it feels hard or over inflated let some air out. It may take a few minutes for you to achieve the desired "feel" in your mattress.

